



K115 (K8.0), 20mm (3/4") CUP Sprinkler Model: RD040/ RD041 Standard/Quick Response 5mm/3mm Glass Bulbs

Product Description

Rapidrop RD040 (Standard) & RD041 (Quick Response) CUP frangible glass bulb automatic sprinkler. RD040 & RD041 are LPCB, CE and UKCA Certified, standard orifice fire sprinkler for installation in fire sprinkler systems. In a fire condition the heat causes the fluid in the glass bulb to expand which shatters the glass and releases the seal assembly. Water flows from the orifice onto the sprinkler deflector which diffuses the water into a uniform spray pattern which extinguishes or controls the fire. Sprinkler produces a spherical water distribution pattern below the deflector.

Design Coverage

For sprinkler coverage area and placement refer to NFPA 13 or EN 12845 standards or other Installation rules for automatic sprinkler systems as required by the authority having jurisdiction.

Response Type Options

Standard Response: RD040 (5mm Bulb)

Quick Response: RD041 (3mm Bulb)

Operating Temperatures

Nominal Operating Temperature	Bulb Colour
57°C (135°F)	Orange
68°C (155°F)	Red
79°C (175°F)	Yellow
93°C (200°F)	Green
141°C (286°F)	Blue


Technical Details

K factor	K115 (K8.0)
Thread size	3/4" NPT R3/4 (3/4" BSPT) available on special order
Max. Working Pressure	12 bar (175 psi)
Min. Operating Pressure	0.5 bar (7psi)
Factory Pressure Test	34 bar (500 psi)
Weight	79 g (2.8 oz)
Fitted with Bulb Protector	Remove after installing the sprinkler



RD040 CUP

RD041 CUP

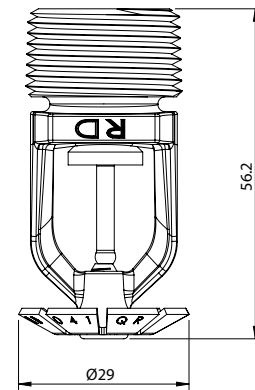

RD040 & RD041

Conventional sprinkler for installing in pendent or upright position giving a spherical discharge with a proportion of water being thrown upwards towards the ceiling.

Standard Finishes

- Plain (Natural)
- Chrome
- White - Epoxy Powder Polyester
- Other RAL colours, available on request.

Accessories

- Baffle plate
- Sprinkler Guard
- Sprinkler Wrench



K115 (K8.0), 20mm (3/4") CUP Sprinkler Model: RD040/ RD041 Standard/Quick Response 5mm/3mm Glass Bulbs


Installation

1. All Rapidrop sprinklers must be installed and maintained in compliance with this document and according to the installation standards, or local rules and requirements which are specified by the authority having jurisdiction. It is the installer's responsibility to conform to such standards and requirements, deviations from the requirements will void any warranty.
2. To ensure that the minimum flow requirement is met, the system piping must be correctly sized.
3. To avoid mechanical damage the sprinklers must be installed after the piping is in place. Any damaged sprinklers must be replaced. If there is a leak from the sprinkler thread, remove the sprinkler, apply new pipe joint compound or tape and re-install.
4. Always check that the sprinklers are the correct model, style, orifice size, temperature and sensitivity ratings prior to commencing installation.
5. Upright sprinklers must be mounted in upright position and Pendent sprinklers must be mounted in pendent position.
6. Use only non-hardening pipe joint compound or PTFE tape. Apply to external threads only.
7. Hand tighten the sprinkler into the fitting, then use the correct sprinkler wrench to tighten the sprinkler into the fitting. Ensure that the sprinkler wrench stays on the wrench flats while tightening the sprinkler. A leak tight joint requires only 10 to 19 Nm (7 to 14 ft.lbs.) torque. i.e. a tangential force of 6.35 to 12.7kgs. (14 to 28 lbs.) delivered through a 150mm (6") handle will deliver adequate torque. Torque levels over 29 Nm (21 ft.lbs.) may distort the orifice seal and result in a leakage.
8. Remove sprinkler bulb protector after the sprinkler is installed and before the system is put into service.

Care and Maintenance

Sprinklers must be carefully handled and stored where temperatures will not exceed 100°F/38°C and they must never be painted, plated, coated or otherwise modified after leaving the factory. Do not install sprinklers which have been dropped or damaged in any way. The installation rules required by the authority having jurisdiction contain guidelines on minimum inspection and maintenance requirements to assist owners fulfilling their responsibility to ensure sprinklers and sprinkler systems are maintained in proper operating condition.

Rapidrop K115 (K8.0) Sprinkler Flow Characteristics

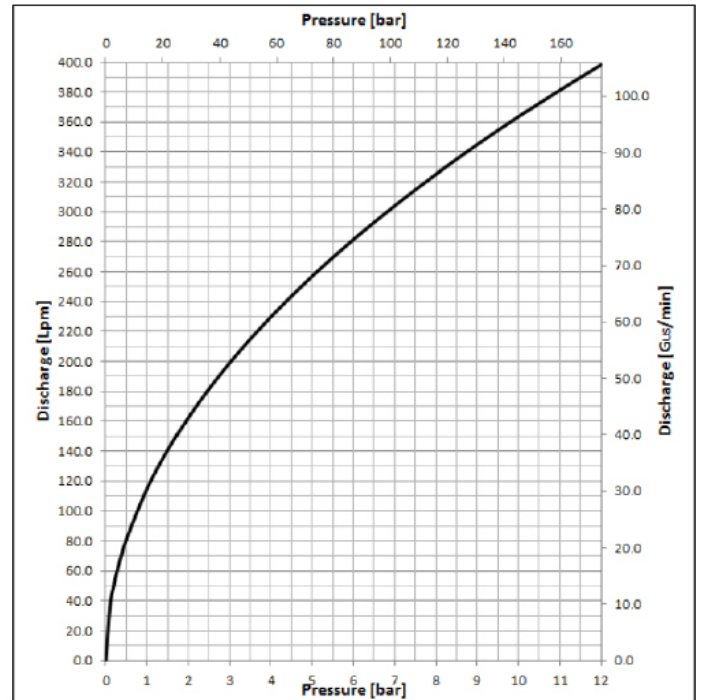

Warranty

Warranty period is one year from the date of shipment. For full details please refer to our terms and conditions of sale.

Ordering Information

Specify: model, orifice size, operating temperature, response type, finish and approval listing required.

Sprinkler Spanner



Always use Rapidrop sprinkler spanner for installing the sprinklers.
Part number: RDSPKSPANV2